




SIGNING INTO TREAD - MOBILE DEVICE

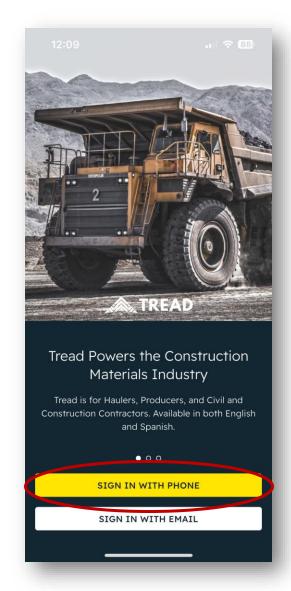

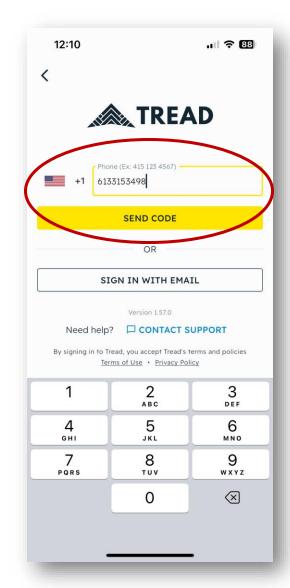


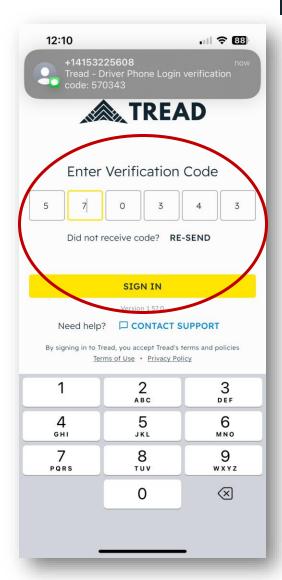



SIGNING INTO TREAD - WEB



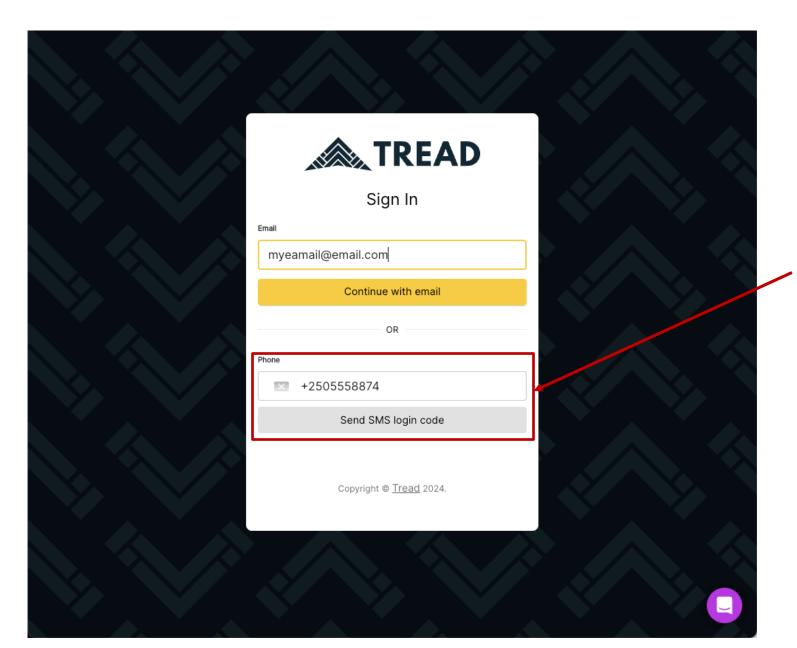

Sign in with mobile number.









Enterprise Term	Horizon Term
Target	Project
Project	Order
Assignment	Job or Truck
Subhauler	Vendor




REQUESTING JOB-MOBILE

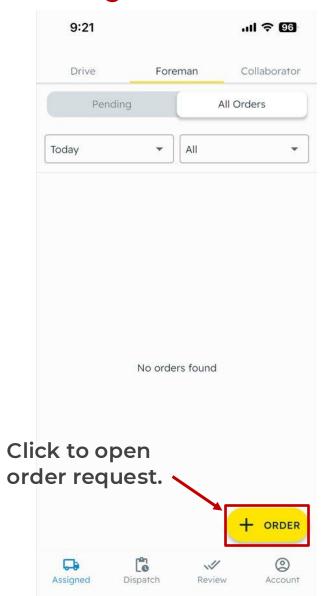

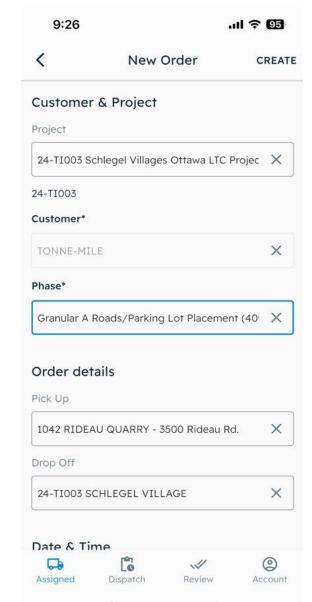




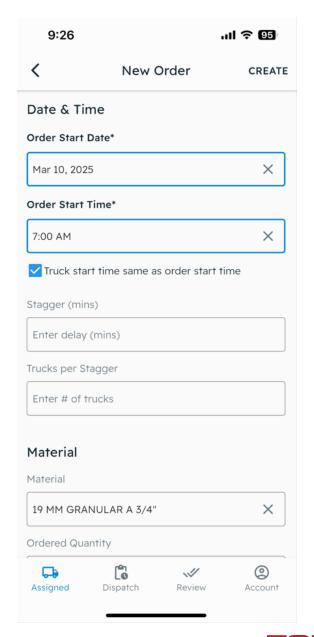





REQUESTING JOB-MOBILE



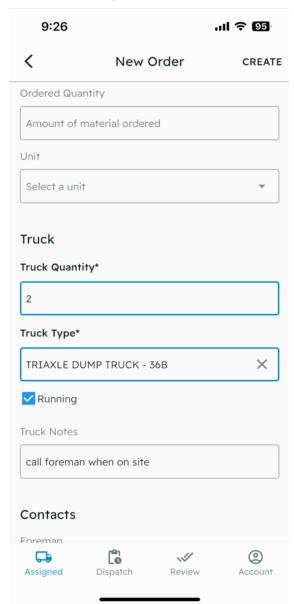

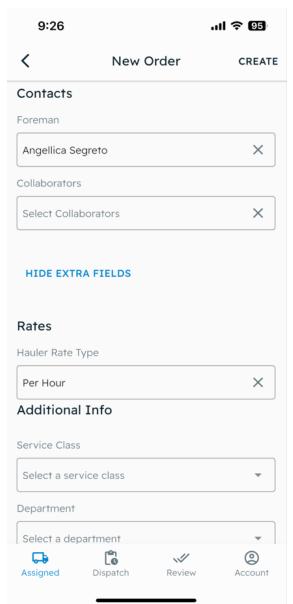

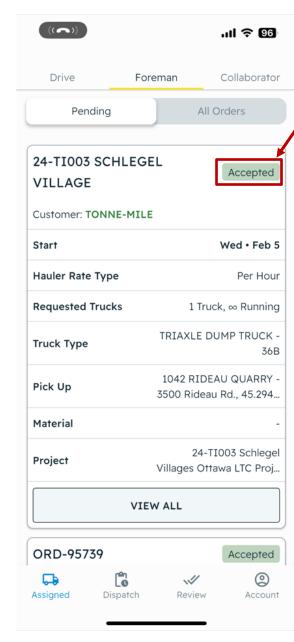

When your order has be accepted.

All information must be filled out in full.


It will not let you create an order if information is missing.







Click to open order request.

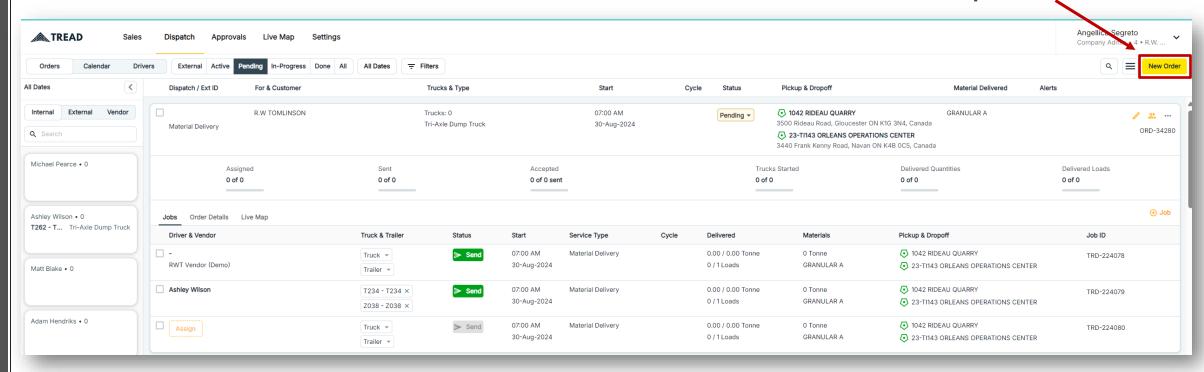







Create Order ×

rder Customer Details		Project Details		
sociated Project Name *	Customer Account *	Project ID	Department	
24-TI003 Schlegel Vi	Project Costing for CC -1 ▼	24-TI003		
er Name	Dispatch No.	Phase Name *	Phase Code *	
		× A		
ernal ID		Site Setup		
illa io		Central Stores		
		Pipe/MH/CB/VC/VB removal		
		Mobilization - Shoring	Truck Capacity	
		SLS, 0-4M Depth, 0-675mm, inc MH		
rder Details		1200mm to 1800mm Precast Manholes in		
vice Class		Manhole Parging/Benching		
		Connection to Existing Sewer	Route Time (mins) Distance (KMs)	
,			Route Time (mins) Distance (KMs)	
)	
	Ordered Quantity Units	OGS, Stormceptor, Environmental Units		
		OGS, Stormceptor, Environmental Units Watermain, 0-300mm, Inc V&VB	Pickup to Dropoff distance	
terial		OGS, Stormceptor, Environmental Units Watermain, 0-300mm, Inc V&VB Fire Hydrant inc. Lateral	Pickup to Dropoff distance	
terial		OGS, Stormceptor, Environmental Units Watermain, 0-300mm, Inc V&VB		
terial		OGS, Stormceptor, Environmental Units Watermain, 0-300mm, Inc V&VB Fire Hydrant inc. Lateral	Pickup to Dropoff distance	
terial		OGS, Stormceptor, Environmental Units Watermain, 0-300mm, Inc V&VB Fire Hydrant inc. Lateral Watermain Cuttings/Capping's/Connectic	Pickup to Dropoff distance Cycle Time (Minutes)	

You'll need to select your WBS/PHASE through a drop down.



REQUESTING JOB- WEB




Create Order

Order Customer Details		Project Details					
Associated Project Name * Customer Account *		Project ID		Department			
24-TI003 Schlegel Vi ▼	Project Costing for CC -1 ▼	24-TI003	24-TI003				
order Name	Dispatch No.	Phase Name *	Phase Name *		Phase Code *		
		Granular A Road	40950.001				
xternal ID				1			
			Trucks				
			Truck Type *		Truck Capacity		
Order Details		TRIAXLE DUMP	TRUCK ▼				
ervice Class	Pick/Drop Times & Distance						
*		Pickup Onsite (mins)	Dropoff Onsite (mins)	Route Ti	me (mins)	Distance (KMs)	
laterial	Ordered Quantity Units	20	20	24		23.78	
*	•	0h 20m	0h 20m	0h 24m		Pickup to Dropoff distance	
Date & Time		Truck Duration (Hours)			Cycle Time	(Minutes)	
				10.5	88		
03/10/2025 07:00 AM	Same as job start	Truck Quantity			Loads Per T	_	
ruck Start Date Truck Start Time	Stagger (mins) Trucks per Stagger			1	5	✓ ∞ Running	
03/10/2025 1 07:00 AM	1	Delivery Estimates					
		Total Loads	Est. Delivered Quantity	Delivere	d per Truck	Units Per Hour	



REQUESTING JOB- WEB



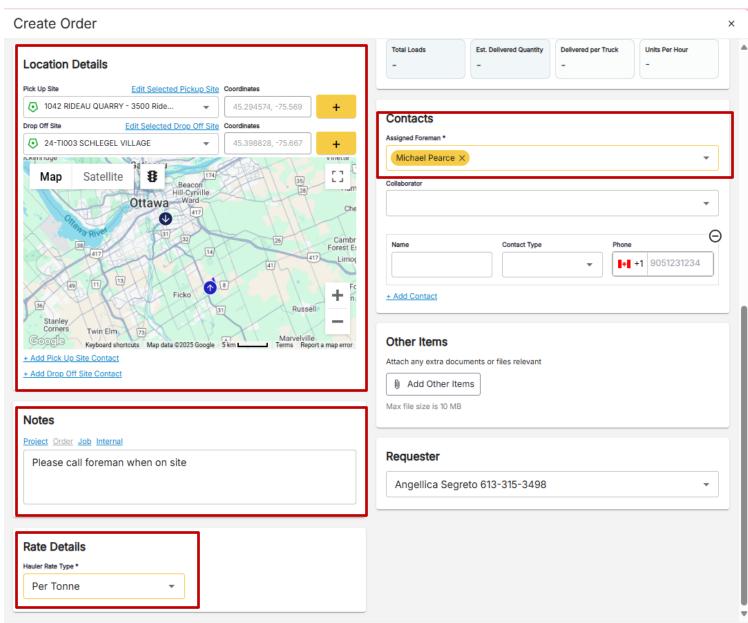



REMINDER: All information must be filled out in full. It will not let you create an order if you are missing information.




Finish Later (>) Create

DISPATCH PAGE - MOBILE.

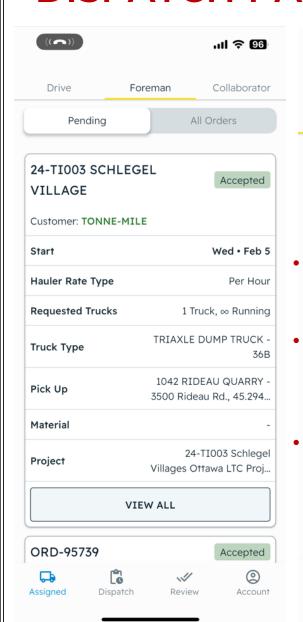

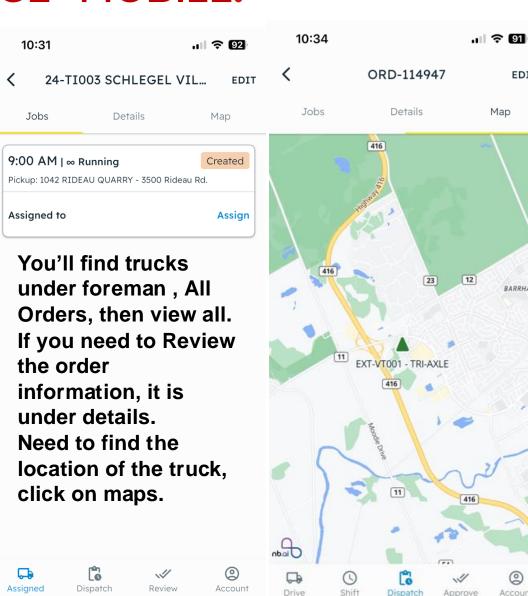

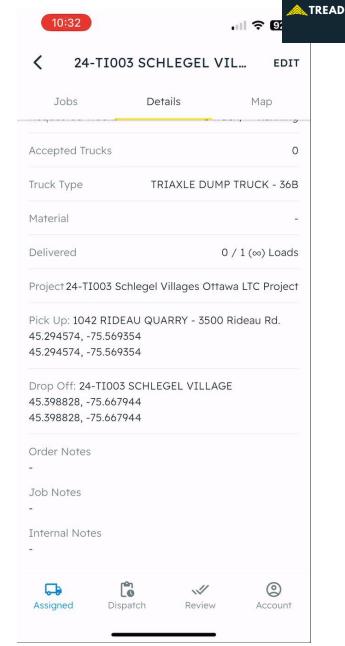

EDIT

BARRHAVEN


Account

Мар



DISPATCH PAGE - WEB




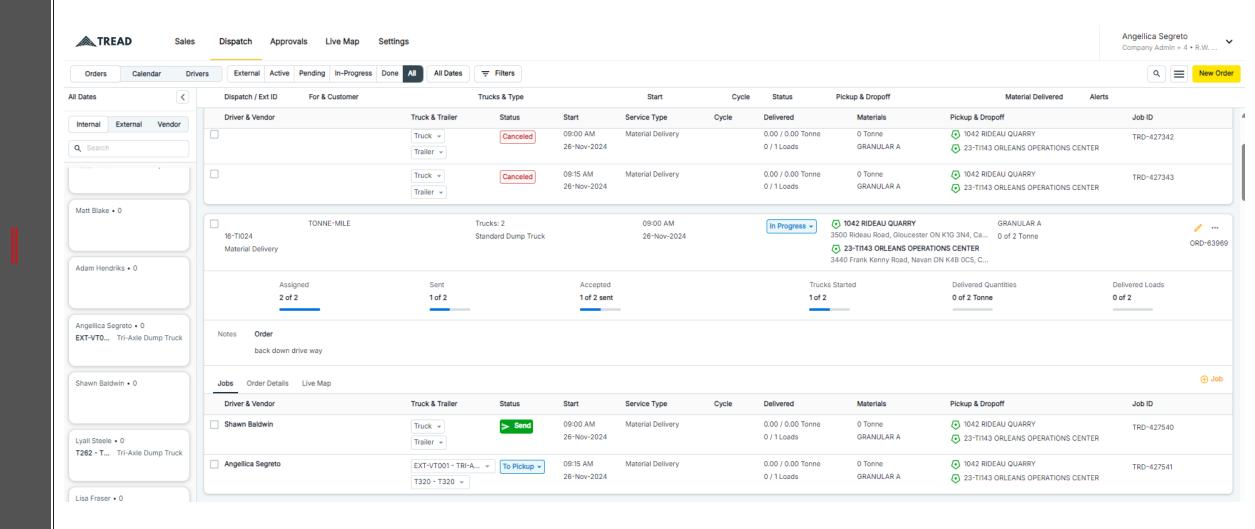




DISPATCH PAGE-WEB



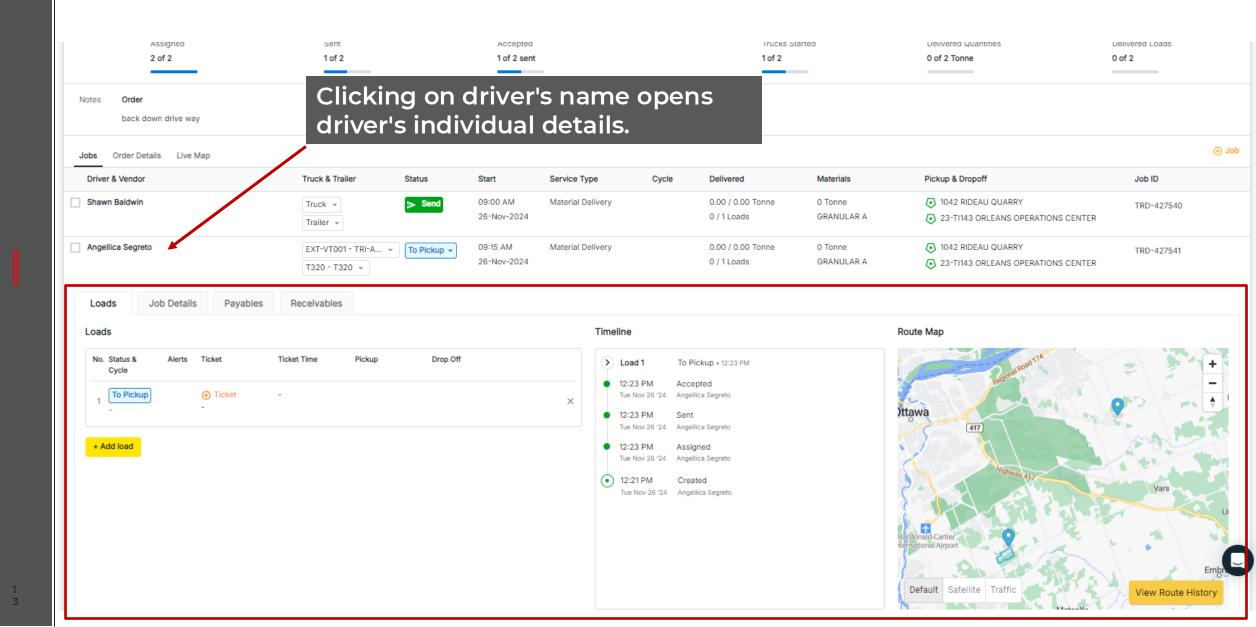

LIVE VIEW-MOBILE



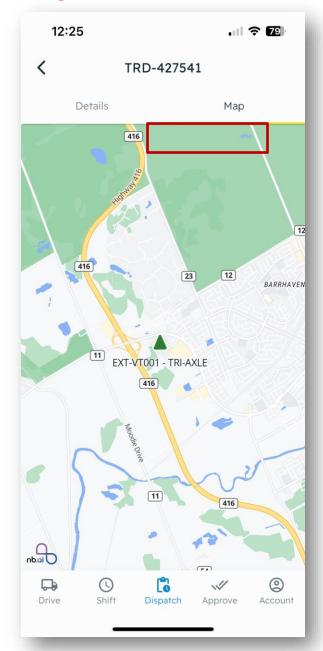



- Map: Shows all trucks for your order.
- If a truck is not showing or is a black triangle, reach out to dispatch.



LIVE MAP - WEB

View: Allows you to follow a trucks route.

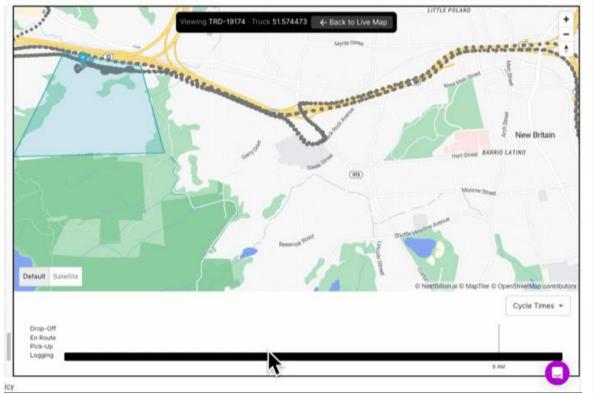


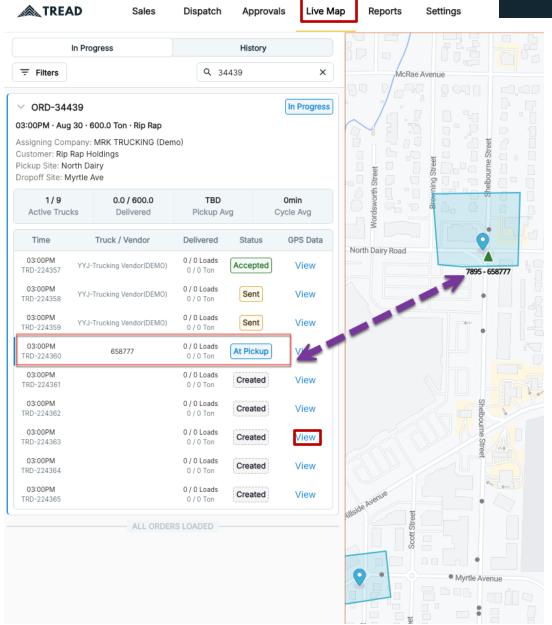

🙈 TREAD

START, PAUSE, RESUME & STOP



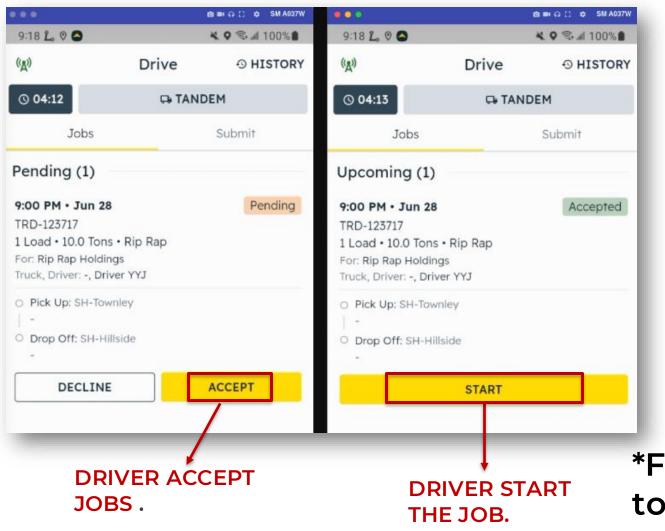

Commonly Asked Questions:


- Why is it important the driver starts the job?
- What if I ask my driver to start earlier or later?
- What if my driver is late to site?


Foreman are still responsible to adjust driver's hours



START, PAUSE, RESUME & STOP



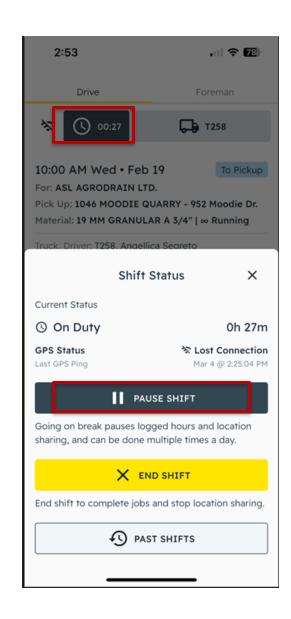

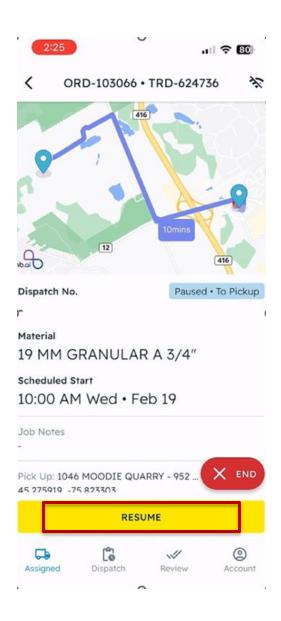


Commonly Asked Questions:

- When is it ok to have a truck pause a job?
- What does the pause button do?
- What happens if the driver forgets to resume a job?



FDC ENTRY



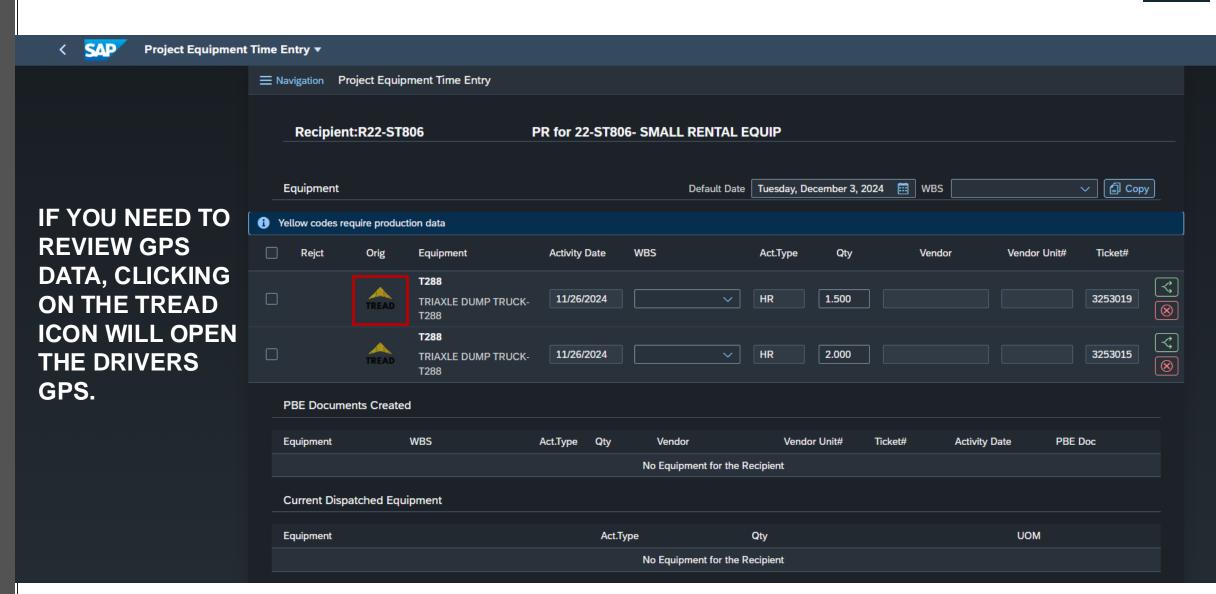




FDC ENTRY CONT'D



Once you click the tread icon, it will open this page. You can verify the hours and track the truck(s) movements throughout the day.

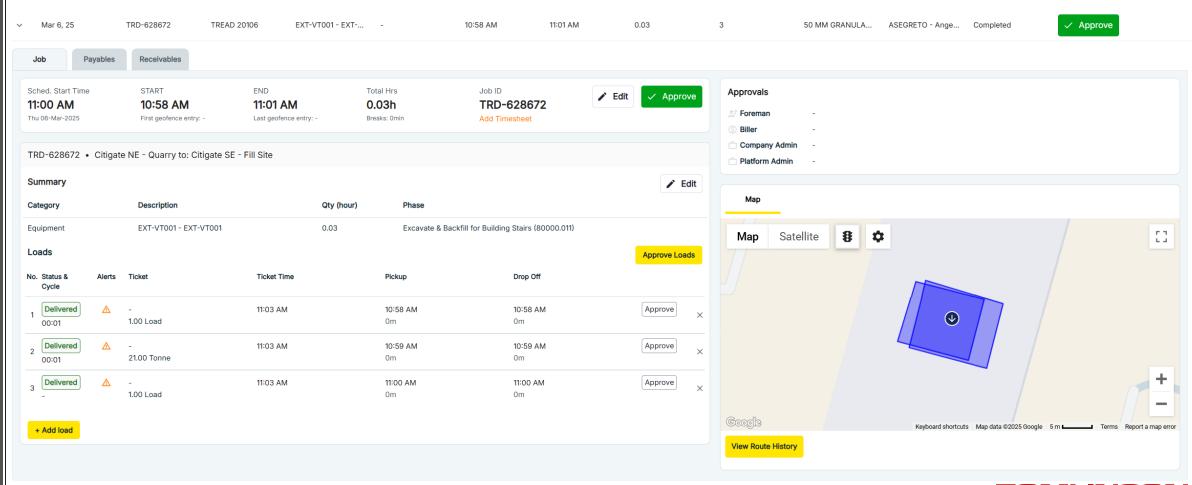



TROUBLE SHOOTING

___TREAD

Q1: I'm not receiving a code to sign into the app.

A1: If you cannot sign in, contact IT Support Desk.

Q2: I'm not seeing my job for the next day.

A2: Contact Truck Dispatch.

Q3: I need to adjust my truck order?

A3: Contact Truck Dispatch.

Q4: What if the app is frozen and I can't sign in or out?


A4: Close the app and reopen it. Refer to video.

If it still isn't working, contact IT Support Desk.

Q5: What if your job is changing from tonne-mile to hourly or vice versa?

A5: Contact Truck Dispatch.

ALL OTHER ISSUES, CONTACT TOMLINSON DISPATCH.

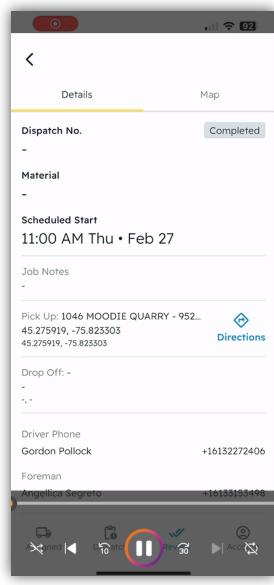



TROUBLE SHOOTING

